


■ Installing the Front Cover

Install the front cover as shown below. The figures below show the **PCF12-B**. The front cover is bilaterally symmetrical and it can also install in right-opening.

1


Install the front cover to the mounting plate.
Provide screws to install the front cover (screws are not included).

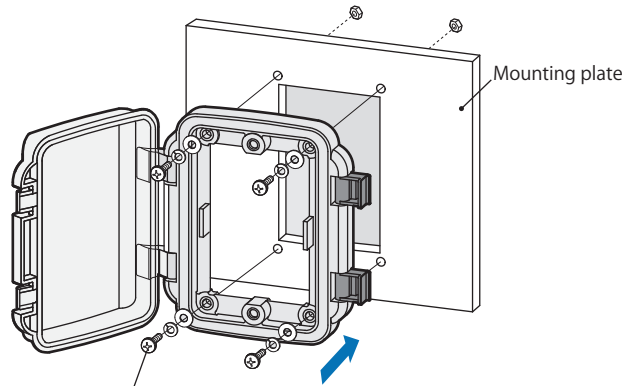

Round head screws: 4xM4 (not supplied)
Frame thickness of screw hole 5mm (0.20 in.)
Tightening torque: 0.5 to 0.7 N·m (4.4 to 6.1 lb-in.)

2

Install the driver using the supplied screws.
For the PCF15-B, the position of the mounting holes is different

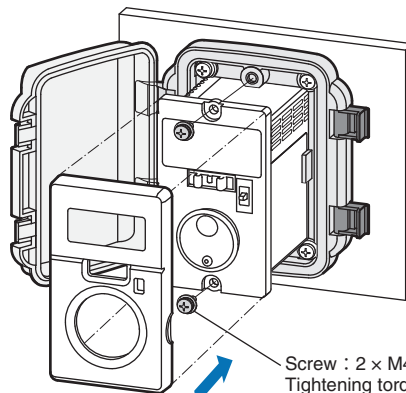

Screw : 2 × M4 (supplied)
Tightening torque : 0.5 ~ 0.7 N·m (3.5 to 6.1 lb-in)*

*0.5 to 0.7 N·m (4.4 to 6.1 lb-in) for **PCB15-B**

Caution Be sure to use the supplied screws.
Using screws of longer nominal length may cause insufficient mounting.

3

Close the cover and secure with latches.

